

Work Order ID 127474

127474

Page 1

December-17-14 1:27:29 PM

Item ID: D350-689-011

Accept

N900040100

Setup Start ***NS1***

Revision ID:

Item Name: Dual High Back Seat Installation

Stop ***NS2***

Start Date: 12/24/14 Start Qty: 1.00

1

Cust Item ID:

Required Date: 1/05/15 Req'd Qty: 1.00

1

Customer:

Reference:

Approvals: Process Plan: MLS Date: 14-12-22 Tooling: _____ Date: _____
QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Run Start ***NR1***
Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

Draw Nbr	Revision Nbr
DSI9588	B
IIN-D350-689	B

54

100 Document Control 0.00

100

DC DOCUMENT CONTROL 0.00

Doc.Control -USB or Paperwork Memo Photocopy bluefile and create labels per PPP D350-689-011 CHG006

(1x) LAS

JAN 09 2015

110 Pick Kit 0.00

110

Packaging Memo 0.00

Packaging

DAS
ES
9-85

JAN 08 2015
JAN 08 2015

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS <table style="width: 100%;"> <tr> <td>Skid-tube ☐</td> <td>Crosstube ☐</td> <td>Water Jet ☐</td> <td>Engineering ☐</td> </tr> <tr> <td>Machining ☐</td> <td>Small Fab ☐</td> <td>Prod. Eng. Coord. ☐</td> <td>Quality ☐</td> </tr> <tr> <td>Thermoforming ☐</td> <td>Finishing ☐</td> <td>Rec/Store/Packaging ☐</td> <td>Other ☐</td> </tr> <tr> <td>Large Fab ☐</td> <td>Composite ☐</td> <td>Supplier ☐</td> <td></td> </tr> </table>	Skid-tube ☐	Crosstube ☐	Water Jet ☐	Engineering ☐	Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐	Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐	Large Fab ☐	Composite ☐	Supplier ☐	
Skid-tube ☐	Crosstube ☐	Water Jet ☐	Engineering ☐															
Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐															
Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐															
Large Fab ☐	Composite ☐	Supplier ☐																

Root Cause	Date	Step	Qty	Description of work order update or non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Design ☐									
Doc/Data ☐									
Equip/Tooling ☐									
Handling/Pre ☐									
Material ☐									
Operator ☐									
Offset/Setup ☐									
Process ☐									
Supplier ☐									
Training ☐									
Transport ☐									
Unapproved ☐									

FAULT CATEGORY

Landing Gear ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Inspection Strip in Tube ☐ Marks/Chatter ☐ Turning Sequence ☐ Wave/Twist in Tube	General ☐ Bend ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Burrs ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Drawing ☐ Drill Holes ☐ Finish ☐ Fit/Function	☐ Folio/Program ☐ Grain ☐ Hardware ☐ Inspection Incomplete/Unqualified ☐ Instructions Incomplete/Unclear ☐ Misaligned/off center ☐ Mislabeled ☐ Misread ☐ Off-set ☐ Out of Calibration ☐ Out of Sequence ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Positioned Wrong ☐ Power Loss/Surge ☐ Pressure/Forced Set-up ☐ Temperature/Cure ☐ Weld ☐ Wrong Stock Pulled ☐ Other
--	--	---

Work Order ID 127474

127474

Page 2

December-17-14 1:27:29 PM

Item ID: D350-689-011

Accept

N900040100

Setup Start ***NS1***

Revision ID:

Item Name: Dual High Back Seat Installation

Stop ***NS2***

Start Date: 12/24/14 Start Qty: 1.00 ***1***

Cust Item ID:

Required Date: 1/05/15 Req'd Qty: 1.00 ***1***

Customer:

Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____
QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Run Start ***NR1***
Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
120	QC4- 100% Inspect kits for completeness	0.00							
120									DAS
QC	Memo	0.00				(1Y)	JAN 09 2015		46
Quality Control									9-89
130	Packaging	0.00							
130									DAS
Packaging	Memo	0.00				DAS			46
Packaging	Identify and pack for shipping as per PPP D350-689-011					9-89	JAN 09 2015		9-89
	Location: _____								
	PPP Rev: _____								
140	QC21- Final Inspection - Work Order Release	0.00							
140									
QC	Memo	0.00							
Quality Control									

MLJ 15-01-09
MLJ 15-01-09

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Crosstube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐
--	--	---

Root Cause	Date	Step	Qty	Description of work order update or non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Design									
Doc/Data									
Equip/Tooling									
Handling/Pre									
Material									
Operator									
Offset/Setup									
Process									
Supplier									
Training									
Transport									
Unapproved									

FAULT CATEGORY

Landing Gear ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Inspection Strip in Tube ☐ Marks/Chatter ☐ Turning Sequence ☐ Wave/Twist in Tube	General ☐ Bend ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Burrs ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Drawing ☐ Drill Holes ☐ Finish ☐ Fit/Function	☐ Folio/Program ☐ Grain ☐ Hardware ☐ Inspection Incomplete/Unqualified ☐ Instructions Incomplete/Unclear ☐ Misaligned/off center ☐ Mislabeled ☐ Misread ☐ Off-set ☐ Out of Calibration ☐ Out of Sequence	☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Positioned Wrong ☐ Power Loss/Surge ☐ Pressure/Forced Set-up ☐ Temperature/Cure ☐ Weld ☐ Wrong Stock Pulled ☐ Other
--	--	---	--

Picklist Print

December-17-14 1:27:28 PM

Page 1

Work Order ID: 127474

127474

Parent Item: D350-689-011

D350-689-011

Parent Item Name: Dual High Back Seat Installation

Start Date: 12/24/14

Required Date: 1/05/15

Start Qty: 1.00

Required Qty: 1.00

Comments: IPP Rev:B03.05.09Reformat; Modify Step 1KJ/RF IPP Rev:C chg003
per DSI 9498 DD 10.02.11 verified by:JLM IPP REV:D 11.11.24 AS PER
ECN11-674 DD VERF:EC

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Qty per Kit	Total Qty	Qty Issued	Date Issued	Status
D350-689-013		DM	Manufactured	No		110	Each	0.0000	1	1			
D350-689-013	46								**				
Floor Provisions	9-89												
D350-689-041		DM	Manufactured	No		110	Each	0.0000	1	1			
D350-689-041	45								**				
Dual High Back Seat Assembly	9-89												
D3018-1		DM	Manufactured	No		110	Each	1.0000	1	1			
D3018-1									**				
Seat Cushion													
				<u>Location</u>		<u>Loc Qty</u>		<u>Loc Code</u>					
				ST415		1							
				116961		1							
D3019-1		DM	Manufactured	No		110	Each	1.0000	1	1			
D3019-1									**				
Back Cushion													
				<u>Location</u>		<u>Loc Qty</u>		<u>Loc Code</u>					
				ST415		1							
				117042		1							

127162 s/p SP

126892 SP SP

127783 s/p SP

127184 s/p SP

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS <table style="width: 100%;"> <tr> <td>Skid-tube ☐</td> <td>Crosstube ☐</td> <td>Water Jet ☐</td> <td>Engineering ☐</td> </tr> <tr> <td>Machining ☐</td> <td>Small Fab ☐</td> <td>Prod. Eng. Coord. ☐</td> <td>Quality ☐</td> </tr> <tr> <td>Thermoforming ☐</td> <td>Finishing ☐</td> <td>Rec/Store/Packaging ☐</td> <td>Other ☐</td> </tr> <tr> <td>Large Fab ☐</td> <td>Composite ☐</td> <td>Supplier ☐</td> <td></td> </tr> </table>	Skid-tube ☐	Crosstube ☐	Water Jet ☐	Engineering ☐	Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐	Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐	Large Fab ☐	Composite ☐	Supplier ☐	
Skid-tube ☐	Crosstube ☐	Water Jet ☐	Engineering ☐															
Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐															
Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐															
Large Fab ☐	Composite ☐	Supplier ☐																

Root Cause	Date	Step	Qty	Description of work order update or non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Design									
Doc/Data									
Equip/Tooling									
Handling/Pre									
Material									
Operator									
Offset/Setup									
Process									
Supplier									
Training									
Transport									
Unapproved									

FAULT CATEGORY

Landing Gear ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Inspection Strip in Tube ☐ Marks/Chatter ☐ Turning Sequence ☐ Wave/Twist in Tube	General ☐ Bend ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Burrs ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Drawing ☐ Drill Holes ☐ Finish ☐ Fit/Function	☐ Folio/Program ☐ Grain ☐ Hardware ☐ Inspection Incomplete/Unqualified ☐ Instructions Incomplete/Unclear ☐ Misaligned/off center ☐ Mislabeled ☐ Misread ☐ Off-set ☐ Out of Calibration ☐ Out of Sequence
		☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Positioned Wrong ☐ Power Loss/Surge
		☐ Pressure/Forced ☐ Set-up ☐ Temperature/Cure ☐ Weld ☐ Wrong Stock Pulled ☐ Other

DART SERVICE INSTRUCTION

TO AMEND INSTALLATION INSTRUCTIONS IIN-D350-689 REV. B AND INSTRUCTIONS FOR CONTINUED AIRWORTHINESS ICA-D350-689 REV. 1

REF. TCCA STC: SH02-33
REF. FAA STC: SR01620NY
REF. EASA STC: EASA.IM.R.S.01453
REF. TCA STC: 2005S03-09

1.0 PURPOSE

For D350-689-011/-013 at CHG 006/005 and later and D350-689-021/-023 Kits at CHG 005/004 and later, the D3026-1 Channel has been replaced with the D4575-1 Beam and D4575-3 Doubler and the D3234-3 Doubler has been removed. Consequently, the installation instructions for D350-689-011/-013 at CHG 006/005 and D350-689-021/-023 at CHG 005/004 are updated per Section 2.0 of this Service Instruction. The parts list update is shown in Section 4.0 of this Service Instruction. There is a negligible change to the weight and balance.

2.0 INSTALLATION CHANGES FOR D350-689-013

Section 3.9, *INSTALLATION OF D350-689-013 FLOOR PROVISIONS KIT* (pages 4 and 5 of IIN-D350-689), is changed as follows:

Item 3.3.15 is:

If there is an existing stringer at LBL 27.33, it will need to be removed from that location. Locate D4575-1 Beam, D4575-3 Doubler, and D3032-1 Spacer as shown in Figure 1 of this Service Instruction. Transfer drill existing holes from the aircraft floor to the D4575-1 Beam, D4575-3 Doubler, and D3032-1 Spacer. Ensure 1.0" to 1.5" rivet pitch and add additional holes if required. If there is no existing stringer, locate D4575-1 Beam, D4575-3 Doubler, and D3032-1 Spacer as shown in Figure 1 of this Service Instruction and drill Ø0.128" holes on a 1.0" to 1.5" pitch.

Note: Drill a Ø1.00" (Ø25.4 mm) hole in the D4575-1 Beam to clear extension tube of collective and cutout as required for clearance of collective opening and fwd bulkhead as shown in Figure 3 of this Service Instruction.

Item 3.3.15 was:

If there is an existing stringer at LBL 27.33, it will need to be removed from that location. Locate D3026-1 Channel as shown in Figure 4 and transfer existing holes from the aircraft floor to the D3026-1 Channel & D3032-1 Spacer. Ensure 1.0" to 1.5" rivet pitch and add additional holes if required. If there is no existing stringer, locate D3026-1 Channel & D3032-1 Spacer as shown in Figure 4 and drill Ø0.128" holes on a 1.0" to 1.5" pitch.

Item 3.3.17 is:

Counter sink holes in the D3032-1 Spacer for MS20426AD4 rivets. Install D4575-1 Beam, D4575-3 Doubler, and D3032-1 Spacer to floor using MS20426AD4 rivets.

Item 3.3.17 was:

Counter sink holes in the D3032-1 Spacer for MS20426AD4 rivets. Install D3026-1 Channel and D3032-1 Spacer using MS20426AD4 rivets.

Item 3.3.22 is:

Rivet D3234-1 Doubler to D3025-1 Beam as shown in Figure 7 using MS20470AD4 rivets. Continue at step 3.3.25.

Item 3.3.22 was:

Rivet D3234-1 Doubler to D3025-1 Beam and D3234-3 Doubler to D3026-1 Channel as shown in Figure 7 using MS20470AD4 rivets. Continue at step 3.2.25.

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED
BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 12.11.09
CERT. NO.: SH02-33
ISSUE NO.: 1

B	CHANGES TO -013 KIT INSTALLATION. REF: CIR12-12.	MB	12.11.09
A	NEW ISSUE	MB	11.12.22
REV.	DESCRIPTION	BY	DATE
DESIGN	<i>[Signature]</i>	DART AEROSPACE LTD	
DRAWN	<i>[Signature]</i>	HAWKESBURY, ONTARIO, CANADA	
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. B
MFG. APPR.	N/A	DSI 9588	SHEET 1 OF 6
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	INSTALLATION CHANGE	NTS
DATE	12.11.09	COPYRIGHT © 2011 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

REV. B
11.12.22

3.0 INSTALLATION CHANGES FOR D350-689-023

Section 3.9, *INSTALLATION OF D350-689-023 ENERGY ATTENUATING FLOOR PROVISIONS KIT* (pages 8 and 9 of IIN-D350-689), is changed as follows:

Item 3.9.8 is:

If there is an existing stringer at LBL 27.33, it will need to be removed from that location. Locate D4575-1 Beam and D4575-3 Doubler as shown in Figure 2 of this Service Instruction. Transfer drill existing holes from the aircraft floor to the D4575-1 Beam and D4575-3 Doubler. Ensure 1.0" to 1.5" rivet pitch and add additional holes if required. If there is no existing stringer, locate D4575-1 Beam and D4575-3 Doubler as shown in Figure 1 of this Service Instruction and drill Ø0.128" holes on a 1.0" to 1.5" pitch.

Note: Drill a Ø1.00" (Ø25.4 mm) hole in the D4575-1 Beam to clear extension tube of collective and cutout as required for clearance of collective opening and fwd bulkhead as shown in Figure 3 of this Service Instruction.

Item 3.9.8 was:

If there is an existing stringer at LBL 27.33, it will need to be removed from that location. Locate D3026-1 Channel as shown in Figure 4 and transfer existing holes from the aircraft floor to the D3026-1 Channel. Ensure 1.0" to 1.5" rivet pitch and add additional holes if required. If there is no existing stringer, locate D3026-1 Channel as shown in Figure 4 and drill Ø0.128" holes on a 1.0" to 1.5" pitch.

Item 3.9.10 is:

Attach D4575-1 Beam and D4575-3 Doubler to floor using qty (14) MS20426AD4 rivets.

Item 3.9.10 was:

Attach D4575-1 Channel to floor using qty (14) MS20426AD4 rivets.

Item 3.9.12 is no longer applicable:

~~Rivet D3234-3 Doubler to D3026-1 Channel as shown in Figure 7 using MS20470AD4 rivets.~~

Item 3.9.12 was:

Rivet D3234-3 Doubler to D3026-1 Channel as shown in Figure 7 using MS20470AD4 rivets.

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-Q-01

APPROVED

BY:


D. SHEPHERD (DE # 02)

DATE: 12.11.09

CERT. NO.: SH02-33

ISSUE NO.: 1

DESIGN		DART AEROSPACE LTD	
DRAWN		HAWKESBURY, ONTARIO, CANADA	
CHECKED		DRAWING NO.	REV. B
MFG. APPR.	N/A	DSI 9588	SHEET 2 OF 6
APPROVED		TITLE	SCALE
DE APPR.		INSTALLATION CHANGE	NTS
DATE	12.11.09	COPYRIGHT © 2011 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

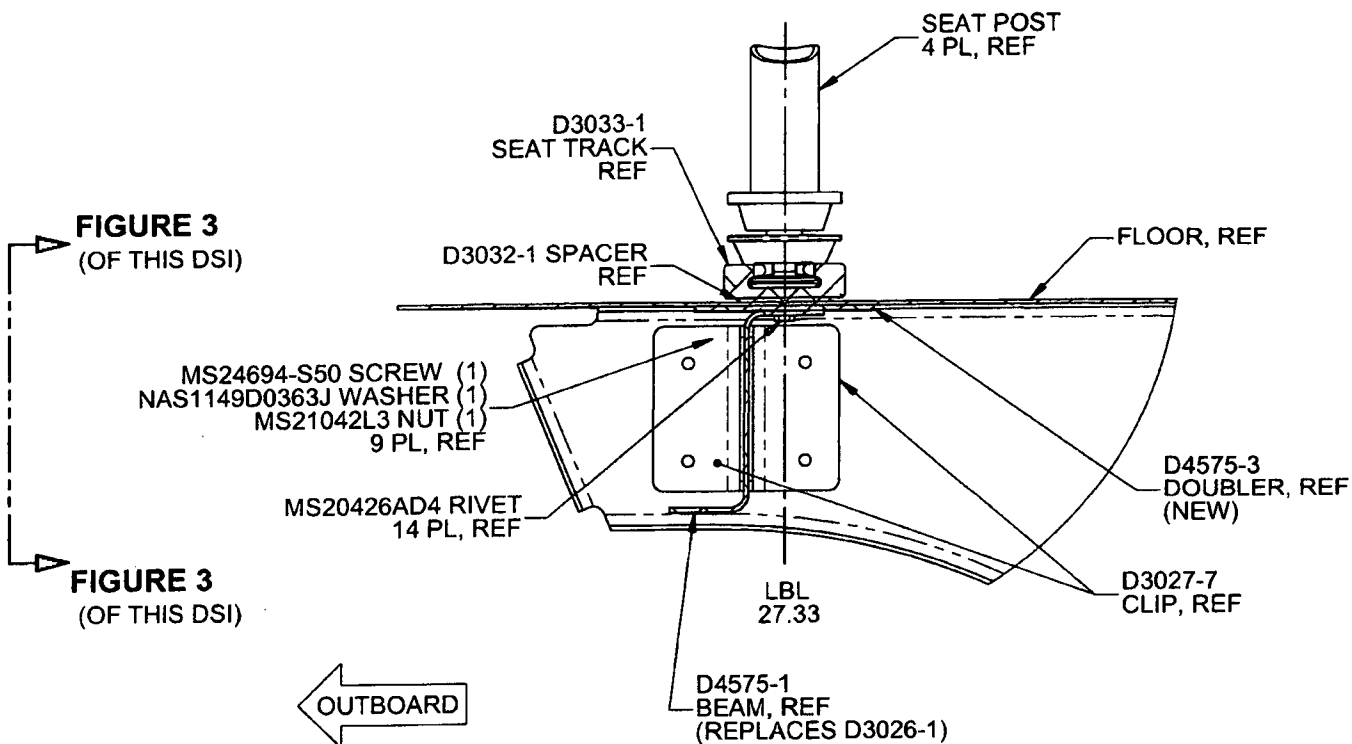

CROSS SECTION VIEW F-F/M-M: From Figures 5 and 7 (IIN-D350-689)
CROSS SECTION VIEW F-F/M-M: From Figures 25-5 and 25-7 (ICA-D350-689)

FIGURE 1: UPDATES TO CROSS SECTIONS F-F AND M-M
 With reference to Figures 5 and 7 of IIN-D350-689
 (Figures 25-5 and 25-7 of ICA-D350-689)

CANADA
 DEPARTMENT OF TRANSPORT
 AIRCRAFT CERTIFICATION
 BRANCH
 DAO # 01-O-01

APPROVED
 BY: *[Signature]*
 D. SHEPHERD (DE # 02)
 DATE: 12.11.09
 CERT. NO.: SH02-33
 ISSUE NO.: 1

DESIGN		DART AEROSPACE LTD	
DRAWN		HAWKESBURY, ONTARIO, CANADA	
CHECKED		DRAWING NO.	REV. B
MFG. APPR.	N/A	DSI 9588	SHEET 3 OF 6
APPROVED		TITLE	SCALE
DE APPR.		INSTALLATION CHANGE	NTS
DATE	12.11.09	COPYRIGHT © 2011 BY DART AEROSPACE LTD	
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.			

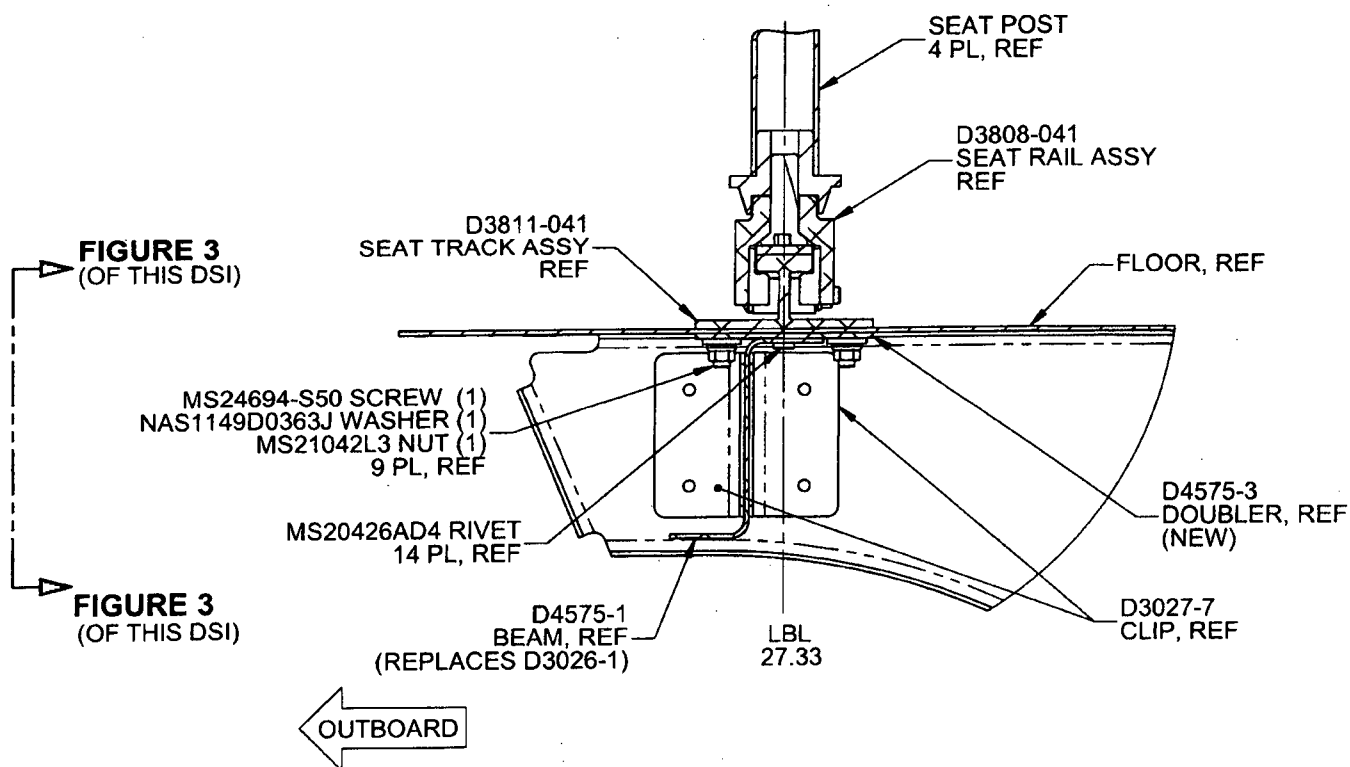


FIGURE 21: Cross Section View T-T from Figure 19 (IIN-D350-689)
FIGURE 25-21: Cross Section View T-T from Figure 25-19 (ICA-D350-689)

FIGURE 2: UPDATES TO FIGURE 21 (IIN-D350-689) AND 25-21 (ICA-D350-689)
 With reference to Figures 19 and 20 of IIN-D350-689
 (Figures 25-19 and 25-20 of ICA-D350-689)

CANADA
 DEPARTMENT OF TRANSPORT
 AIRCRAFT CERTIFICATION
 BRANCH
 DAO # 01-O-01

APPROVED

BY: *[Signature]*
 D. SHEPHERD (DE # 02)

DATE: 12.11.09
 CERT. NO.: SH02-33
 ISSUE NO.: 1

DESIGN	<i>[Signature]</i>	DART AEROSPACE LTD	
DRAWN	<i>[Signature]</i>	HAWKESBURY, ONTARIO, CANADA	
CHECKED	<i>[Signature]</i>	DRAWING NO. DSI 9588	REV. B
MFG. APPR.	N/A		SHEET 4 OF 6
APPROVED	<i>[Signature]</i>	TITLE INSTALLATION CHANGE	SCALE
DE APPR.	<i>[Signature]</i>		NTS
DATE	12.11.09	COPYRIGHT © 2011 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

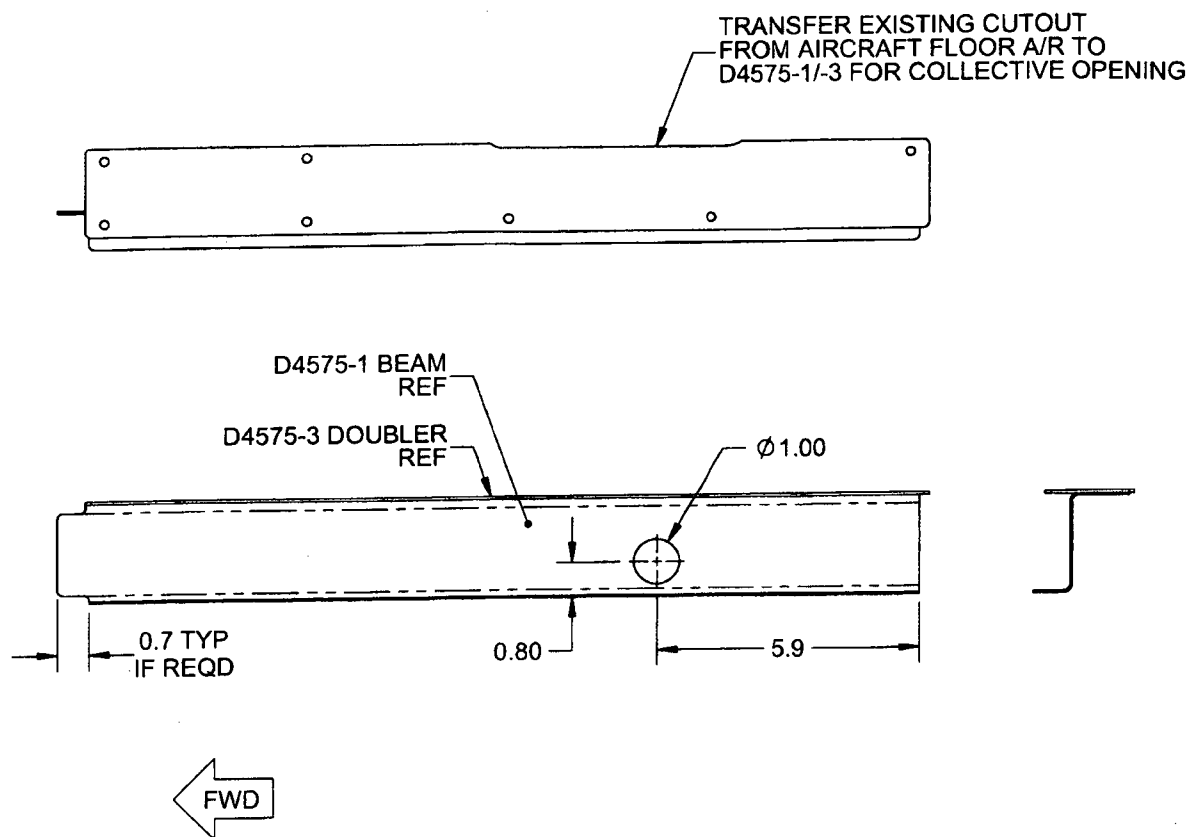


FIGURE 3: RELIEFS ON D4575-1/-3
(ONLY D4575-1/-3 SHOWN FOR CLARITY)
VIEW LOOKING INBOARD

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-Q-01

APPROVED

BY:

D. SHEPHERD (DE # 02)

DATE: 12.11.09
CERT. NO.: SH02-33
ISSUE NO.: 1

DESIGN	B	DART AEROSPACE LTD	
DRAWN	B	HAWKESBURY, ONTARIO, CANADA	
CHECKED	B	DRAWING NO.	REV. B
MFG. APPR.	N/A	DSI 9588	SHEET 5 OF 6
APPROVED	B	TITLE	SCALE
DE APPR.	B	INSTALLATION CHANGE	NTS
DATE	12.11.09	COPYRIGHT © 2011 BY DART AEROSPACE LTD	
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.			